




CELLULAR RUBBER PROFILES

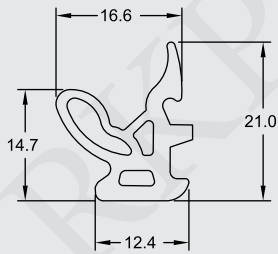


S39030

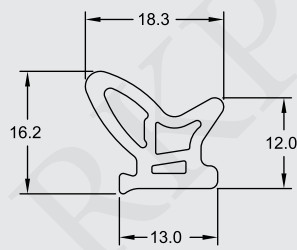


S11203

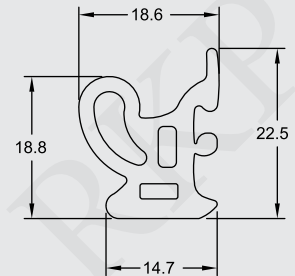


S31103

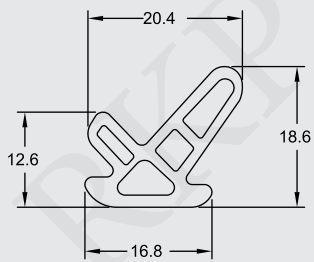


S31176

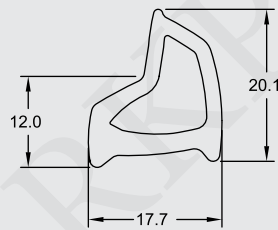


S31422

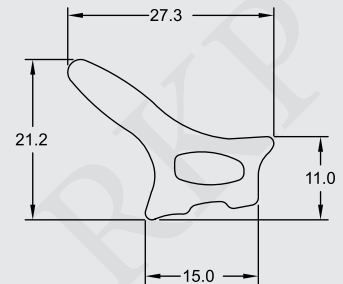


S11417

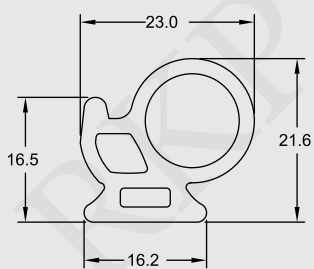


S11305

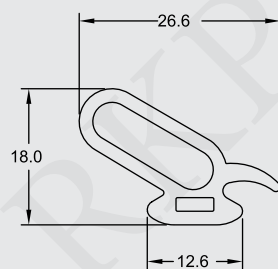


S31413

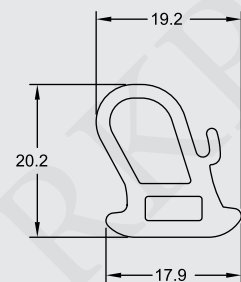


S39010

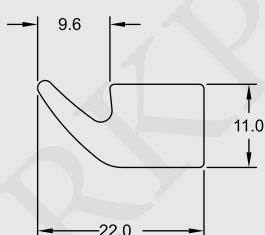

S29017












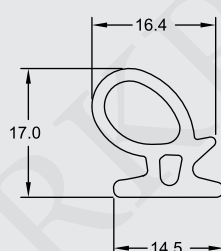


S39009

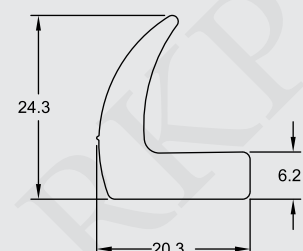


S29027


CELLULAR RUBBER PROFILES

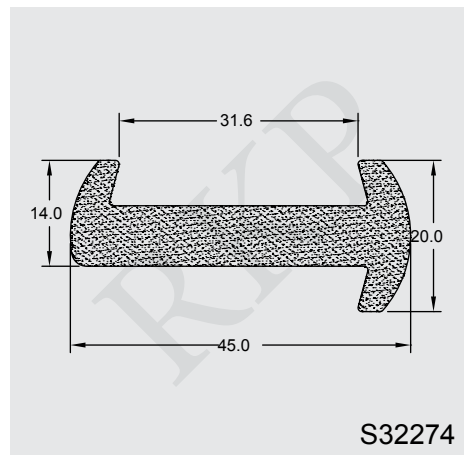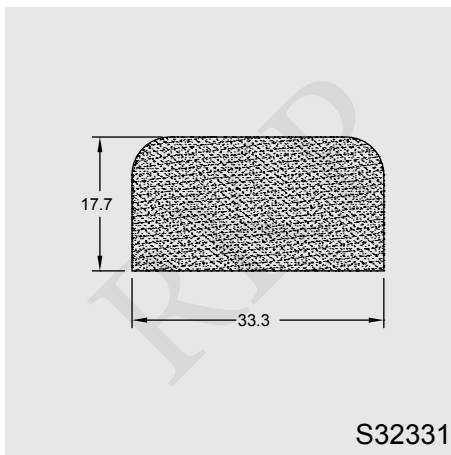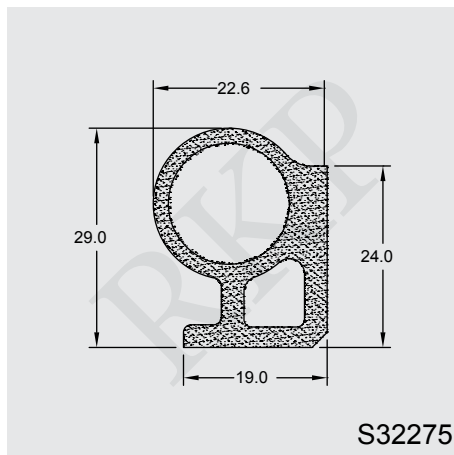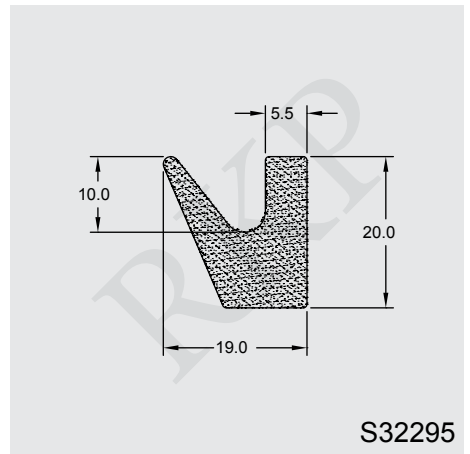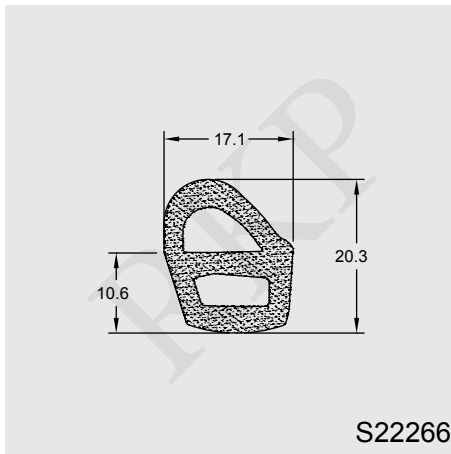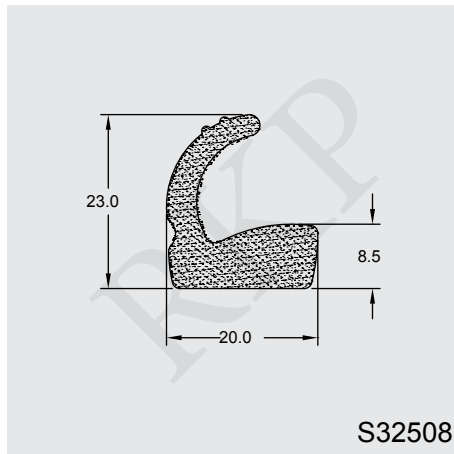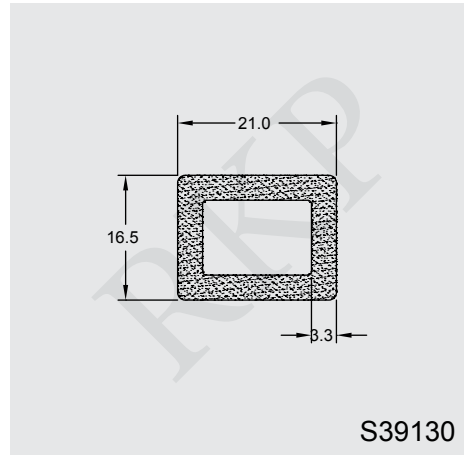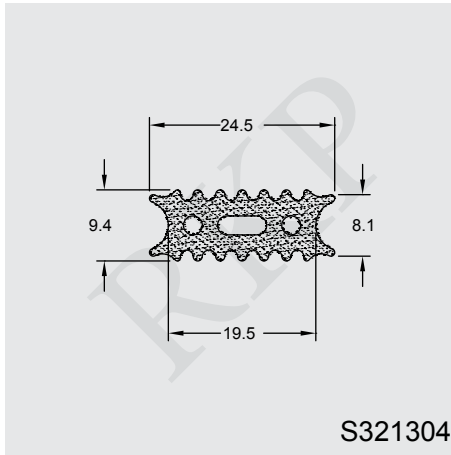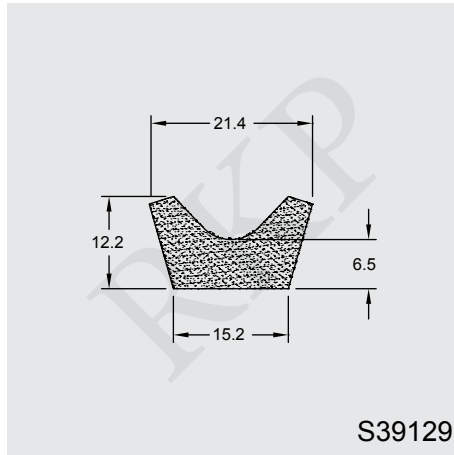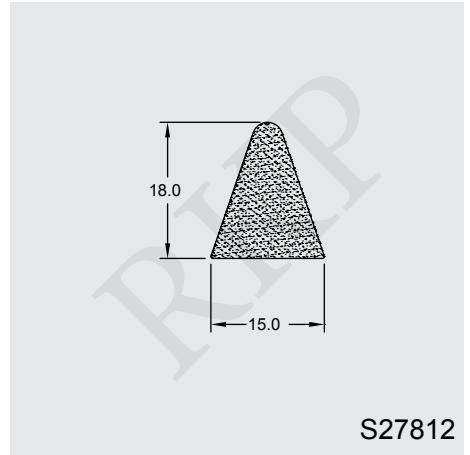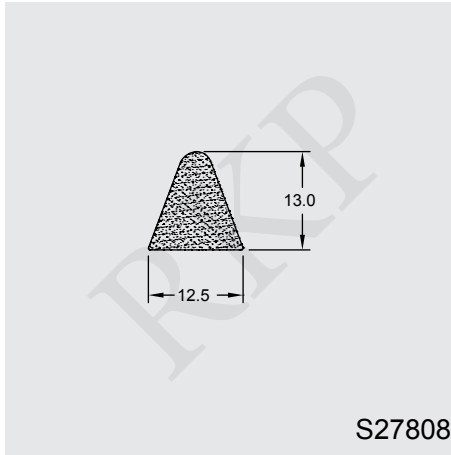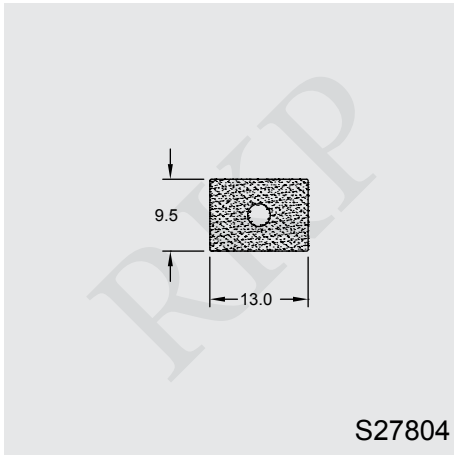


CELLULAR RUBBER PROFILES

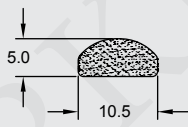


S32028A

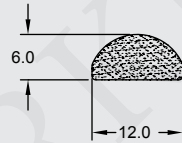


S221302

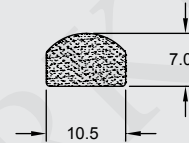


S22228

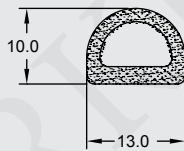


S32306

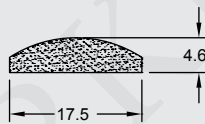


S27103

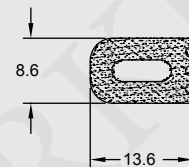


S32077

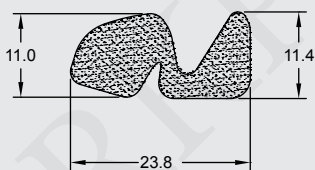


S32708

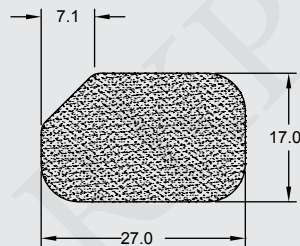


S32330

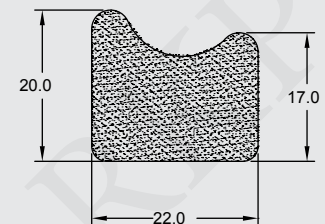


S43103

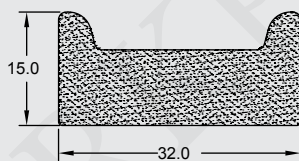

S22854

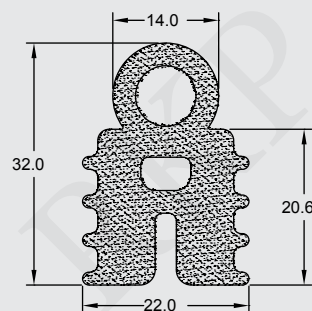

S32076/2110

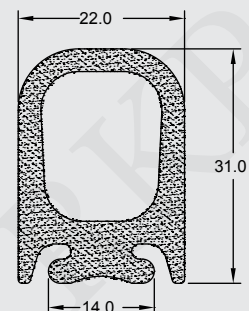

S32517